

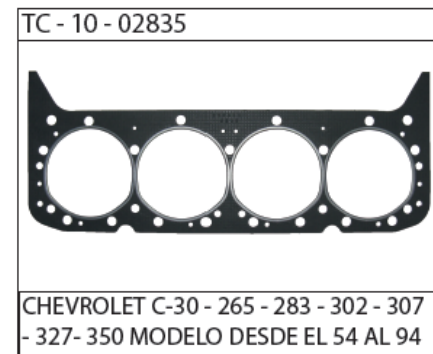
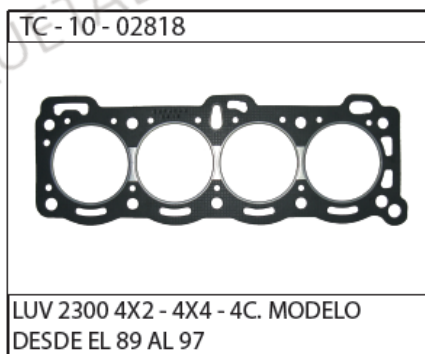
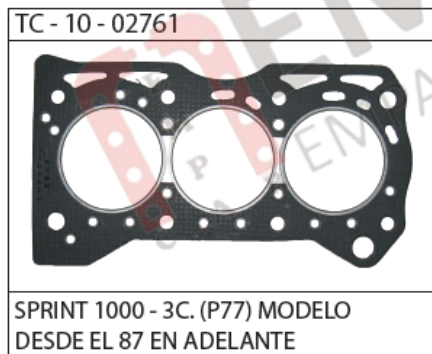
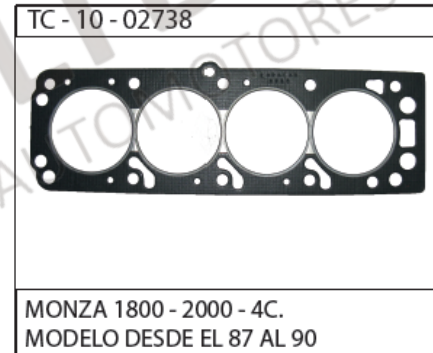
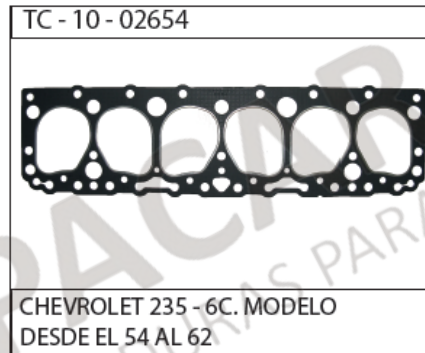
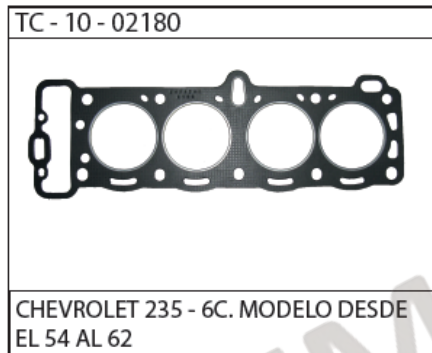
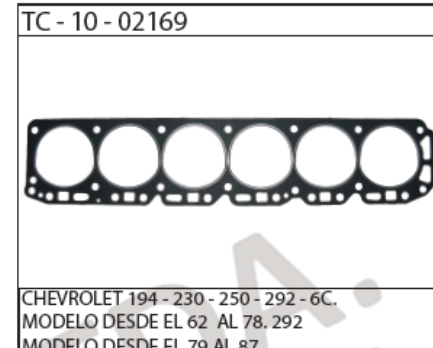


CHEVROLET

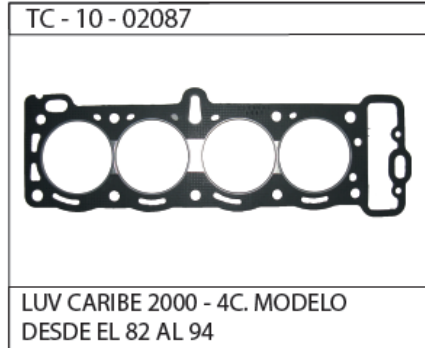

CHEVROLET

TC - 10 - 02901

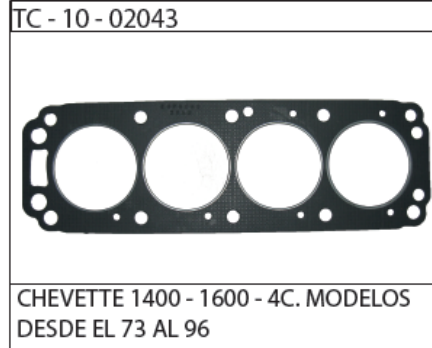

CHEVROLET B60 - C70 - 366 - B8
MODELO DESDE EL 66 AL 90

TC - 10 - 02982




TROOPER 2600 - 4X4 - 4C. MODELO
DESDE EL 88 AL 96 CARROS A GAS.

TC - 10 - 02982



TROOPER 2600 - 4X4 - 4C. MODELO
DESDE EL 88 AL 96

TC - 10 - 03179

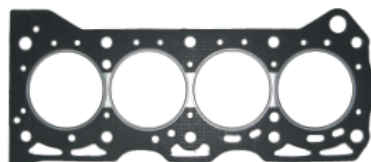


SWIFT 1300 SAMURAI 4C. MODELO
DESDE EL 91 EN ADELANTE

TC - 10 - 03783




CORSA 1400 - M98 - 1600 TAXI POWER
MODELO DESDE EL 2000 AL 2006

TC - 10 - 03795A

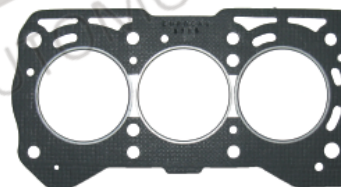


SPRINT 1000 - 3C. SEGUNDA SERIE
MODELO DESDE EL 98 AL 2004

TC - 10 - 03889

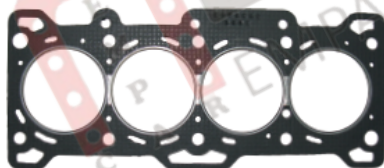

SPARK 7 - 24 TAXI 995CC. MODELO
DESDE EL 2005 AL 2006

TC - 10 - 03576

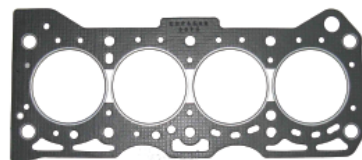


VITARA 1600 - 16V - 4C. MODELO
DESDE EL 93

TC - 10 - 03651



ALTO WAGON R1000 MODELO DESDE EL
2001 EN ADELANTE

CHEVROLET

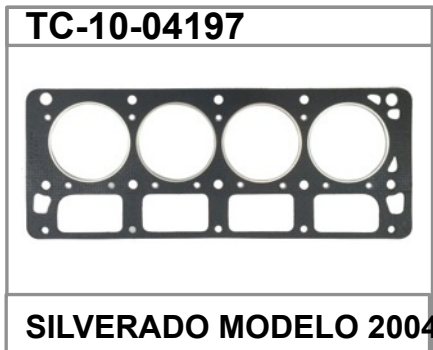

EMPAQUETADURAS PARA AUTOMOTORES

EMPAQUETADURAS PARA AUTOMOTORES

